




**KMC**  
MEDIA CENTER  
Owner's Manual

**KMC45**

KMC MULTI-MEDIA RECEIVER WITH USB,  
BLUETOOTH and AUX Input.

### Media Center

 Multi-Media Receiver w/ USB, Bluetooth and AUX Input

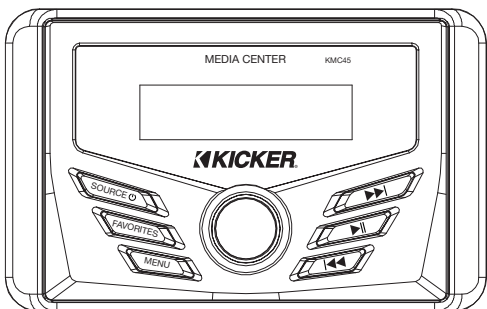

Thank you for purchasing the KMC45 Media Center. We recommend reading through the entire manual for detailed instructions on how to install and operate the unit. For support please call: 1-800-844-2774

#### ITEMS INCLUDED:

- (1) KMC45 (1) Trim Ring (1) Wiring Harness
- (1) Mounting Gasket (1) Owner's Manual

Purchase Date: \_\_\_\_\_

Serial Number: \_\_\_\_\_

#### FCC Compliance Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide more reasonable protection against harmful interference in a residential installation.

Operation is subjected to the following two conditions: (1) This device may not cause harmful interference, and (2) the device must accept any interference received, including interference that may cause undesired operation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, you are encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- The equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

#### CE

Operation temperature: (-25°C~55°C)

Bluetooth: 2402-2480MHz

Bluetooth transmitter power: 4.33dBm

Hereby declares that this equipment is in compliance with essential requirements and other relevant provisions of Directive 2014/53/EU.

 
 
 
All radio frequencies can be used in all EU member safe without restrictions.

#### IC WARNING

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions: (1) This device may not cause interference; and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

# KMC45 Installation Overview

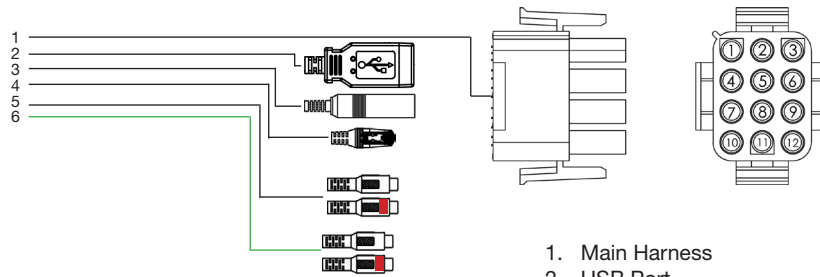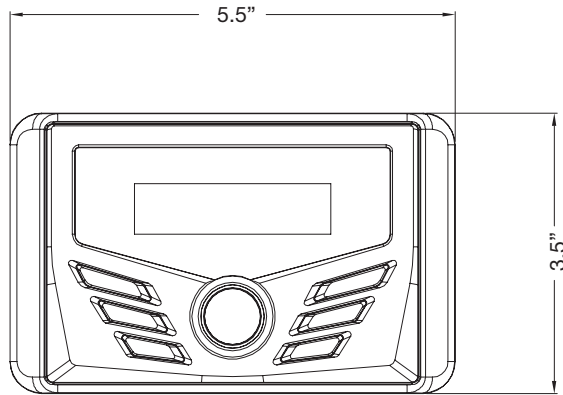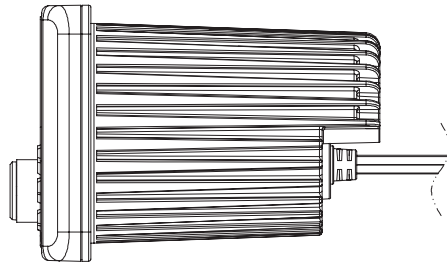

1. Main Harness
2. USB Port
3. Antenna Input
4. Remote Port
5. AUX Input
6. Rear RCA Output

### **Main Harness**

 
- 1- Red, Switched 12V+
- 2- White/Blk, Left Front Spkr, Negative
- 3- White, Left Front Spkr, Positive
- 4- Orange, Dimmer
- 5- Grey/Blk, Right Front Spkr, Negative
- 6- Grey, Right Front Spkr, Positive
- 7- Blue, Amp Turn-on
- 8- Green/Blk, Left Rear Spkr, Negative
- 9- Green, Left Rear Spkr, Positive
- 10- Black, Ground
- 11- Purple/Blk, Right Rear Spkr, Negative
- 12- Purple, Right Rear Spkr, Positive

## OPERATION

The button layout below will give you a quick overview of the button functionality.

### BUTTONS:

- 1 - Source
- 2 - Favorites
- 3 - Menu
- 4 - Seek/Tune Up
- 5 - Play/Pause
- 6 - Seek/Tune Down
- 7 - Volume Knob

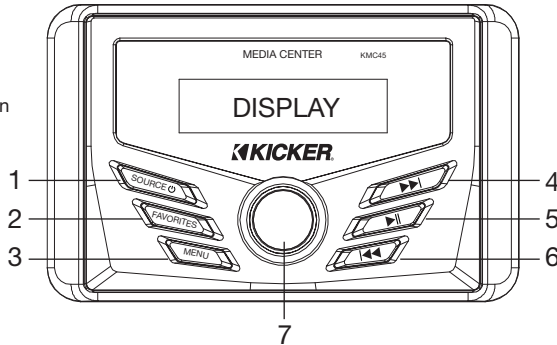

Function:	How To:
Power On	Press the Source (1) button.
Power Off	Hold the Source (1) button for 2 seconds.
Volume Up	Turn the knob (7) clockwise.
Volume Down	Turn the knob (7) counter-clockwise.
Seek Up	Press Seek Up (4) once.
Seek Down	Press Seek Down (6) once.
Tune Up	Hold down Seek Up (4).
Tune Down	Hold down Seek Down (6).
Play/Pause	Press Play/Pause (5) once.
Mute	Press Play/Pause (5) once.

### KMC45 Settings MENU

To enter the Settings Menu : Hold the MENU (3) button for 2 seconds.

Press the Menu (3) button to scroll between menu items and rotate the knob (7) to adjust the Menu setting.

#### Available Settings are:

##### Beep:

Turns the audible key press on and off. Default is off.

##### Loud:

Turns the loudness function on and off. Default is off.

##### Tuner Region:

Changes the FM/AM Tuner region from USA to Europe. Default is USA.

##### Sources

To change any of the sources, press the Source (1) button on the KMC45.

##### FM Source:

Function:	How To:
Seek Up:	Press the Seek Up (4) button once.
Seek Down:	Press the Seek Down (6) button once.
Tune Up:	Hold the Tune Up (4) button for 2 seconds. Then press (4) once.
Tune Down:	Hold the Tune Down (6) button for 2 seconds. Then press (6) once.
Mute:	Press the Play/Pause (5) button.

##### AM Source:

Function:	How To:
Seek Up:	Press the Seek Up (4) button once.
Seek Down:	Press the Seek Down (6) button once.
Tune Up:	Hold the Tune Up (4) button for 2 seconds. Then press (4) once.
Tune Down:	Hold the Tune Down (6) button for 2 seconds. Then press (6) once.
Mute:	Press the Play/Pause (5) button.

## OPERATION

### Bluetooth Source:

<b>Function:</b>	<b>How To:</b>
Next Track:	Press the Seek Up (4) button once.
Previous Track:	Press the Seek Down (6) button once.
Pause:	Press the Play/Pause (5) button.

Bluetooth Device Name: **Media Center**. There is no password required.

When the KMC45 is not paired with a device “BT MUSIC” will flash on the screen until a device is paired. Press and Hold Favorites (2) button for 2 seconds to manually disconnect from a paired device and reenter pairing mode. Press and Release Favorites (2) button to reconnect last known paired device.

### USB Source:

<b>Function:</b>	<b>How To:</b>
Next Track:	Press the Seek Up (4) button once.
Previous Track:	Press the Seek Down (6) button once.
Fast Forward:	Hold the Tune Up (4) button.
Rewind:	Hold the Tune Down (6) button.
Pause:	Press the Play/Pause (5) button.

To quickly scroll through available tracks on the USB drive, Press and Release the Favorites (2) button to show the quick browse menu. Rotating the knob left and right will scroll through available tracks. Pressing the knob (7) will select the track and begin playback.

### AUX Input Source:

<b>Function:</b>	<b>How To:</b>
Mute:	Press the Play/Pause (5) button.

## FAVORITES

The Favorites button will allow you to view and set your favorite station from the following sources: FM - AM

### Setting a Favorite

1. Press Favorite (2) button to select the Favorite position you would like to program.
2. Tune to the desired channel you wish to set into that Favorite position.
3. Press and Hold the Favorites (2) button for 2 seconds to set.

### Audio Settings

**Audio Menu:** Press the Menu (3) button to enter the Audio Settings Menu. Pressing the Menu (3) button again will scroll between the available settings. Rotating the knob (7) will adjust the setting.

**Bass:** Rotate the knob left and right to adjust the Bass. Adjustment is from -6 to +6.

**Treble:** Rotate the knob left and right to adjust the Treble. Adjustment is from -6 to +6.

**Balance:** Rotate the knob left and right to adjust the Balance. Adjustment is from Left 6 to Right 6.

**Fader:** Rotate the knob left and right to adjust the Fader. Adjustment is from Front 6 to Rear 6.

**Equalizer:** The KMC45 has the following preset options for the EQ:  
**USER** - Flat - Classical - Pop - Rock. Rotating the knob left and right to scroll between the options.

## TROUBLESHOOTING

---

The following checklist will help you remedy problems you may encounter with your unit. Before going through the checklist below, check the connection and operating procedures. If the problem is not solved, please contact your local KICKER retailer or call 1-800-844-2774.

### General

**No power is being supplied to the unit-** Check to ensure 12V is being supplied to the red wire and the black wire has a good ground.- - Check the fuse Press the Source button.

**No Sound-** Check to ensure amplifiers (if applicable) are on.- Check to ensure fader and balance are in the middle (0) position.

**The buttons will not function-** Perform Master Reset by holding the Play/Pause button down for 10 seconds.

### Radio Reception

**Stations cannot be received-** Check Antenna for proper connection.- The broadcast signal is too weak.- Ensure Tuner in Settings Menu is set to proper region.

### USB playback

**You cannot play back items via a USB hub.-** This unit cannot recognize USB devices via a USB hub.

**A USB device takes longer to play back.-** The USB device contains files with a complicated tree structure or contains a large amount of files.

**The sound is intermittent.-** The sound may be intermittent at a high-bit-rate of more than 320 kbps.

## Warranty

---

### WARRANTY

#### Electronics Limited Warranty (including KICKER Accessories)

When purchased from an Authorized KICKER Dealer, CPS warrants this product to be free from defects in material and workmanship under normal use for a period of ONE (1) YEAR from date of original purchase with receipt. If this product is identified as “Refurbished” or “B Goods”, the warranty is limited to a period of THREE (3) MONTHS from the date of original purchase. In all cases you must have the original receipt. Should service be necessary under this warranty for any reason due to manufacturing defect or malfunction during the warranty period, CPS will repair or replace (at its discretion) the defective merchandise with equivalent merchandise. Warranty replacements may have cosmetic scratches and blemishes. Discontinued products may be replaced with more current equivalent products. Warranty is valid only for the original purchaser and is not extended to owners of the product subsequent to the original purchaser. Any applicable implied warranties are limited in duration to a period of the express warranty as provided herein beginning with the date of the original purchase at retail, and no warranties, whether express or implied, shall apply to this product thereafter.

© 2019 CPS Distributors, Inc.  
6024 Parretta Dr. Kansas City, MO 64120  
800-844-2774

