


KICKER® KPw2™




Portable Wireless Speaker | QUICK-START

Bocina inalámbrica portátil | GUÍA DE INICIO RÁPIDO

Haut-parleur sans fil portable | GUIDE DE DÉMARRAGE RAPIDE

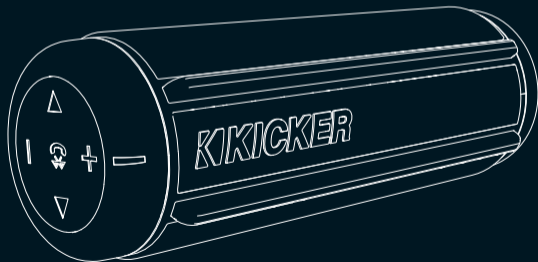


Contents | Contenido | Contenu

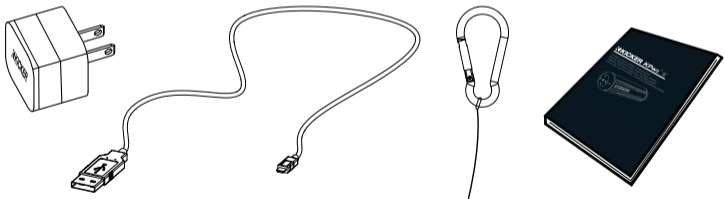


IMPORTANT: Fully charge the KPw2 before first use by connecting to power supply for up to 5 hours. Aux Input is only active when 1/8" (3.5mm) stereo cable is connected and no Bluetooth playback is detected.

Controls | Controles | Contrôles

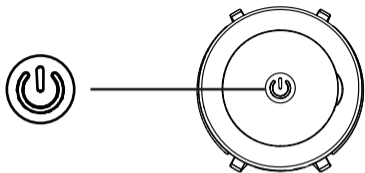


LED Status

| | |
|----------------|-------------------|
| Blue | Bluetooth® |
| Blinking Blue | Pairing |
| Green | Aux input |
| Blinking Green | No input detected |

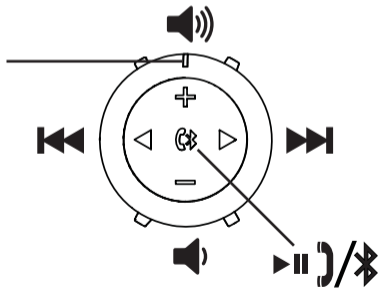



Connections | Conexiones | Connexions

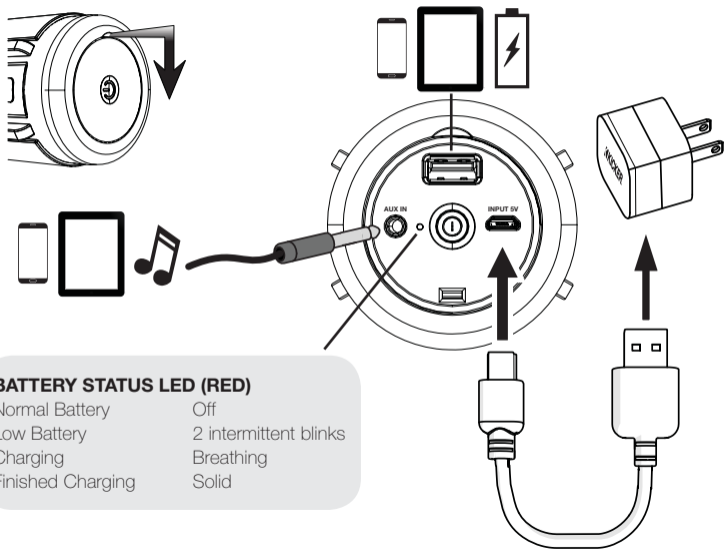

BATTERY STATUS LED (RED)

| | |
|-------------------|-----------------------|
| Normal Battery | Off |
| Low Battery | 2 intermittent blinks |
| Charging | Breathing |
| Finished Charging | Solid |

Pairing | Emparejamiento | Jumelage

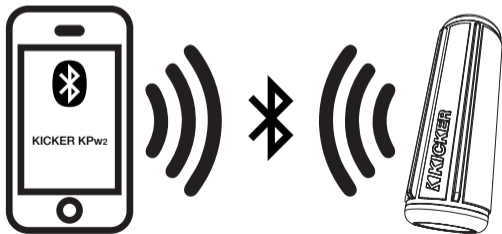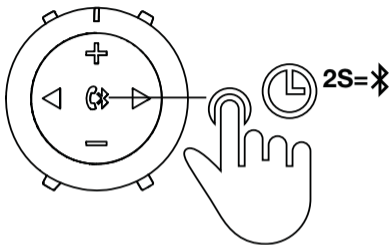

SPECIFICATIONS | ESPECIFICACIONES | CARACTÉRISTIQUES

| | |
|---|---|
| SPEAKERS ALTAVOCES HAUT-PARLEURS | Two 1-3/4" [44mm] Full Range Drivers Two 2" [52mm] Passive Radiators Dos conductores de amplitud completa de 1-3/4" [44mm] Dos radiadores pasivos de 2" [52mm] Deux haut-parleurs pilotes complets de 44 mm [1 po. 3/4] Deux haut-parleurs diffuseurs passifs de 52 mm [2 po.] |
| FREQUENCY RESPONSE RESPUESTA DE FRECUENCIA RÉPONSE EN FRÉQUENCE | 180Hz-20kHz |
| INPUTS ENTRADAS ENTRÉES | Bluetooth, 3.5mm AUX |
| BATTERY BATERÍA BATTERIE | 3.7V Lithium Ion, 3000mAh; 3.5 hours charge time 3.5 horas de tiempo de carga 3,5 heures de durée de recharge |
| POWER SUPPLY FUENTE DE ALIMENTACIÓN SOURCE DE COURANT | 5V, 2.1A |
| BLUETOOTH | Version 3.0 + EDR, 10m [33ft] range/rango/bereich/gamme |
| WEIGHT/DIMENSIONS PESO / DIMENSIONES POIDS/DIMENSIONS | 1.25 lbs [.57 kg] Length Largo Longueur - 7.9" [201mm] Diameter Diámetro Diamètre - 2.7" [68mm] |

Troubleshooting

KPw2 is unresponsive or will not power on:

1. Check that the battery is fully charged by connecting the KPw2 to a known-good power source. Allow the KPw2 to charge for at least 3.5 hours, then power on the speaker. The battery is full when the **battery status LED** turns solid RED while charging.
2. Reset the KPw2 by pressing and holding the **power button** while inserting the USB charging cable. The USB cable needs to be connected to a known-good power source.

KPw2 will not pair or connect:

1. If you have previously paired your device with the KPw2, then please 'Unpair' or 'Forget this Device' per the instructions for your audio device.
2. Press and hold the **Bluetooth|Phone button** for 2 seconds to enter pairing mode. Make sure your audio device is scanning or in 'discovery mode', then select Kicker KPw2.

Device paired and connected, but volume is low or inaudible:

Check the audio levels of both devices.

WARNING!

Keep out of reach of children. The content of this package includes small parts and cords that can cause choking or strangulation.

WARRANTY

KICKER products are warranted against defects. Duration and terms of warranty depend on the laws in the country in which it was purchased. For details see your local KICKER Dealer or www.kicker.com/warranty.

Our goods come with guarantees that cannot be excluded under the **Australian Consumer Law**. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

IMPORTANTE: Cargue completamente el KPw2 conectándolo a la corriente eléctrica por 5 horas antes de usarlo por primera vez. La entrada auxiliar solamente se activa cuando se conecta un cable estéreo de 1/8" (3.5mm) y no se detecta ninguna reproducción por Bluetooth.

Resolución de problemas

El KPw2 no responde o no enciende:

1. Revise que la batería esté cargada completamente, conectando el KPw2 a una fuente de energía que sepa que funcione correctamente. Deje cargando el KPw2 por lo menos unas 3.5 horas, y luego enciende la bocina. La batería está cargada completamente cuando el **LED de estado de la batería** esté en ROJO mientras se está cargando.

2. Reinicie el KPw2 manteniendo presionado el **botón de encendido** al mismo tiempo que inserta el cable USB de carga. El cable USB debe estar conectado a una fuente de energía que sepa que funcione correctamente.

El KPw2 no se emparejará o conectará:

1. Si ya has emparejado el dispositivo previamente con el KPw2, por favor usa "Desemparejar" u "Omitir este dispositivo" según las instrucciones del dispositivo de audio.

2. Mantén presionado el **botón Bluetooth|Teléfono** durante 2 segundos para entrar al modo de emparejamiento. Asegúrate de que el dispositivo de audio esté escaneando en "modo de descubrimiento", y selecciona Kicker KPw2.

El dispositivo está emparejado y conectado, pero el volumen es bajo o no se escucha:

Revisa los niveles de audio de ambos dispositivos.

GARANTÍA

Los productos KICKER se encuentran cubiertos contra defectos. La duración y los términos de la garantía dependen de las leyes del país donde fueron adquiridos. Para más información, consulte a su distribuidor local de KICKER o visite www.kicker.com/warranty.

LED DE ESTADO DE LA BATERÍA (ROJO)

| | |
|------------------|---------------------------|
| Batería normal | Apagado |
| Batería baja | 2 parpadeos intermitentes |
| Carga | Respiración |
| Carga completada | Sólido |

LED DE ESTADO

| | |
|-------------------|------------------|
| Azul | Bluetooth® |
| Parpadea en azul | Emparejamiento |
| Verde | entrada auxiliar |
| Parpadea en verde | Sin entrada |

IMPORTANT : Chargez entièrement la KPw2 avant la première utilisation en la connectant à une prise électrique pendant jusqu'à 5. L'entrée auxiliaire n'est active que lorsque le câble stéréo 1/8 po (3,5 mm) est connecté et qu'aucune lecture Bluetooth n'est détectée.

Dépannage

Le KPw2 ne répond plus ou ne s'allume pas :

1. Vérifiez que la batterie est totalement chargée en reliant le KPw2 à une source d'alimentation sûre. Laissez le KPw2 se recharger pendant au moins 3 heures et demi puis allumez le haut-parleur. La batterie est complètement rechargée quand le **LED d'état de la batterie** devient **ROUGE** fixe en chargement.
2. Réinitialisez le KPw2 en appuyant et en maintenant enfoncé le **bouton de mise en marche** tout en branchant le câble de recharge USB. Le câble USB doit être relié à une source d'alimentation fiable.

Le KPw2 ne s'appaire pas ou ne se connecte pas :

1. Si vous avez effectué l'appairage préalable de votre appareil avec le KPw2, veuillez l'arrêter ou supprimer cet appareil de la liste selon les instructions de votre appareil audio.
2. Appuyez et maintenez enfoncé le **bouton Bluetooth|Phone** pendant 2 secondes pour passer en mode appairage. Assurez-vous que votre appareil audio est en mode recherche ou découverte, puis sélectionnez le Kicker KPw2.

L'appareil est appairé et connecté mais le niveau sonore est faible ou inaudible :

Vérifiez les niveaux audio des deux appareils.

GARANTIE

Les produits KICKER sont garantis contre les défauts. La durée et les termes de la garantie dépendent des lois en vigueur dans le pays où l'achat a été effectué. Pour plus d'informations, veuillez contacter votre vendeur KICKER local ou vous rendre sur : www.kicker.com/warranty.

LED D'ÉTAT DE LA BATTERIE (ROUGE)

| | |
|--------------------|-------------------------------|
| Batterie normale | Éteinte |
| Batterie faible | 2 clignotements intermittents |
| Chargement | Murmure |
| Chargement terminé | Fixe |

LED D'ÉTAT

| | |
|-----------------|--------------|
| Bleu | Bluetooth® |
| Bleu clignotant | Jumelage |
| Vert | Aux input |
| Vert clignotant | Pas d'entrée |

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radiation Exposure Statement:

This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

WARNING:

1. The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
2. Do not ingest battery, chemical burn hazard.
3. This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
4. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.
5. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
6. Use only power supplies provided by KICKER.
7. Unplug the apparatus during lightning storms or when unused for long periods of time.
8. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
9. Please refer to the information on exterior bottom enclosure for electrical and safety Information before installing or operating the apparatus.

CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

FCC ID: TQYKPW2
IC ID: 6233A-KPW2



CONFORMS TO
ANSI/UL STD. 60065
CERTIFIED TO
CAN/CSA STD.
C22.2 No.60065



©2015 Stillwater Designs